ETLIN-DANIELS



INSTALLATION MANUAL - LED WALL PACK / PHOTOCELL / CHANGEABLE WATTAGE AND COLOR TEMPERATURE WPSM25-UCO-FDB-PC

IMPORTANT: READ ALL INSTRUCTIONS BEFORE THE INSTALLATION

⚠ WARNING

CAN ICES-005 (B) / NMB-005 (B)

UL CERTIFIED
SAFETY US·CA
SÛRETÉ US·CA
E474174

- To avoid electric shock, disconnect power at the source prior to installation or maintenance.
- If performing maintenance, allow the fixture to cool down first.
- This installation should only be performed by a qualified electrician.
- Do not touch the fixture when activated.
- If there is any problem with this fixture, turn off the power and only attempt repair if you are a qualified electrician.
- The electrical rating for this fixture contains a photocell which is 120-277VAC.
- Mounting instructions specify the use of a sealing compound to fill the gap between the fixture and the mounting surface.
- Any alteration or modification of this product is forbidden as it may cause personal injury, death, property damage, and / or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -40°C to 50°C.
- Min 90°C supply Conductors.

INSTALLATION INSTRUCTION

METHOD A

FIG. 1

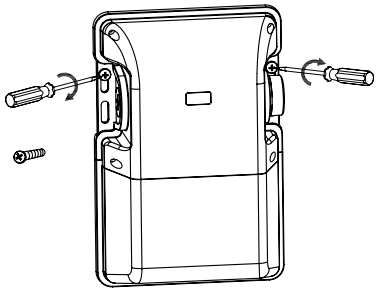


FIG. 2

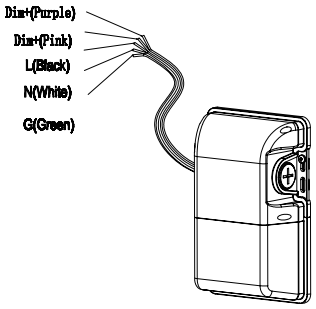


FIG. 3


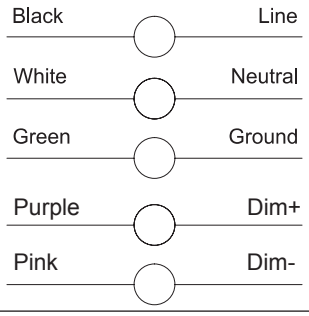


FIG. 4

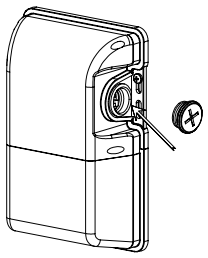

DEFAULT SETTING: 25W / 5000K

1. Affix the fixture on the wall through the side ear holes with 2x M4 screws (not provided) (Fig 1).
2. Connect the wires. (Fig 2 & 3).
3. Unscrew the cap to select desired CCT / Wattage / Photocell Sensor function. Cap the module after the operation is done. (Fig 4).
4. Caulk to the mounting surface, at all sides.

Head Office - 1850 Wilson Ave. · Toronto, ON · M9M 1A1 · **Tel:** 416.741.7336 · **Fax:** 416.741.9104
Toll Free: in Canada. 1.800.661.9610 · in USA. 1.888.762.5384 (SOCKETS4U)
www.etlin-daniels.com · For sales/service questions - sales@etlin.com

ETLIN-DANIELS



INSTALLATION MANUAL - LED WALL PACK / PHOTOCELL / CHANGEABLE WATTAGE AND COLOR TEMPERATURE WPSM25-UCO-FDB-PC

IMPORTANT: READ ALL INSTRUCTIONS BEFORE THE INSTALLATION

INSTALLATION INSTRUCTION

METHOD B

FIG. 1

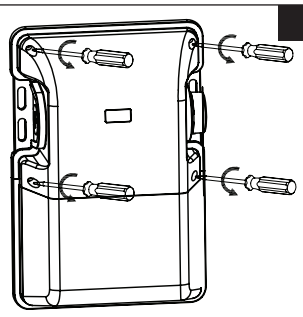


FIG. 2

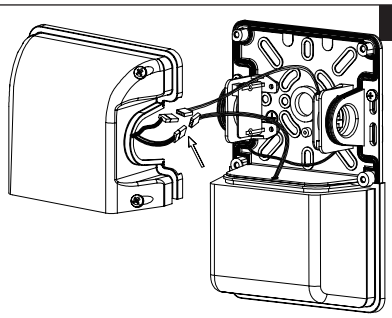


FIG. 3

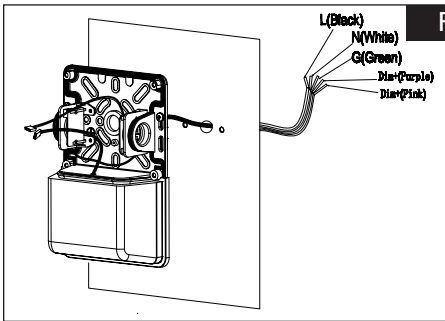


FIG. 4

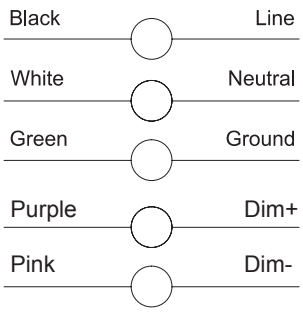


FIG. 5


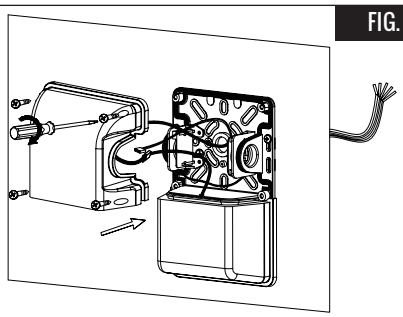



FIG. 6

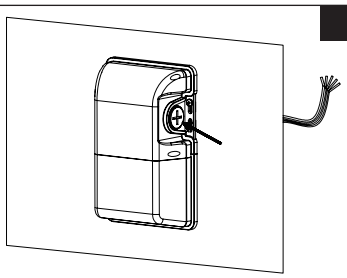

DEFAULT SETTING: 25W / 5000K

1. Follow (Fig 1) to unscrew the 4 x M3 screws to open the front face cover of the fixture.
2. Separate the front face cover from the base by disconnecting the male and female connectors, then remove the driver box. (Fig 2)
3. Drill holes on the fixture base according to the junction box template or mounting position on the wall. Fix the fixture on the wall & connect the wires as shown in (Fig 3 & 4).
4. Connect the male and female connectors. Carefully & tightly attach the fixture front cover (driver box) back to the base by the 4x M3 screws. (Fig 5).
5. Unscrew the cap to select desired CCT / Wattage / Photocell Sensor function. Cap the module after the operation is done. (Fig 6)
6. Caulk to the mounting surface, at all sides.

WIRING DIAGRAM

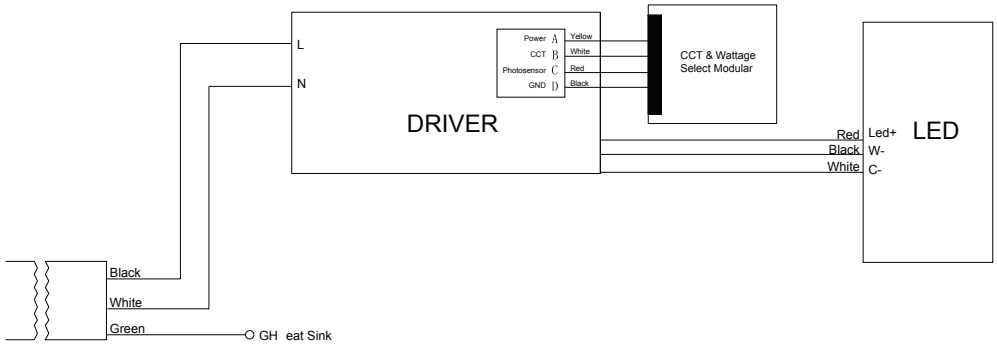

Head Office - 1850 Wilson Ave. · Toronto, ON · M9M 1A1 · **Tel:** 416.741.7336 · **Fax:** 416.741.9104
Toll Free: in Canada. 1.800.661.9610 · in USA. 1.888.762.5384 (SOCKETS4U)
www.etlin-daniels.com · For sales/service questions - sales@etlin.com

ETLIN-DANIELS


INSTALLATION MANUAL - LED WALL PACK / PHOTOCELL / CHANGEABLE WATTAGE AND COLOR TEMPERATURE WPSM25-UCO-FDB-PC



IMPORTANT: READ ALL INSTRUCTIONS BEFORE THE INSTALLATION

CCT AND POWER SELECTION GUIDE


1. Select the desired CCT & Wattage before operation.

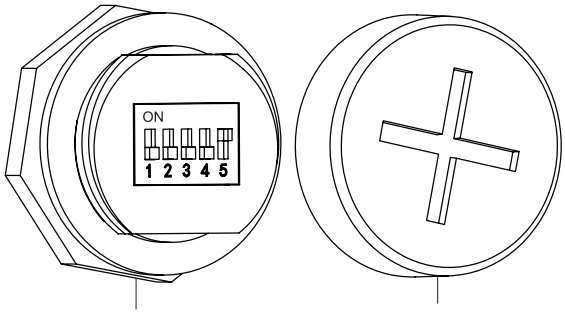


CCT & Wattage Select Modular Cap

2. Cap must be screwed back after CCT and Wattage selection.


WATTAGE

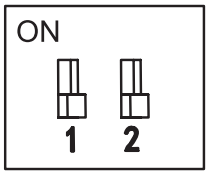

100% (Default)

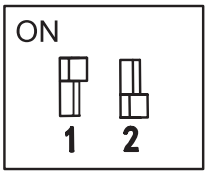


80%

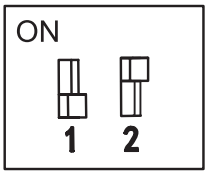


60%

PHOTOCELL

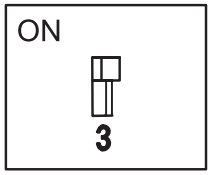


Sensor ON

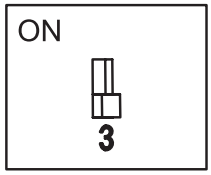


Sensor OFF (Default)


CCT

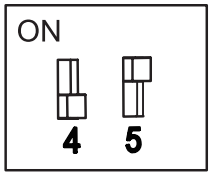

5000K (Default)

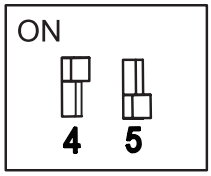

4000K

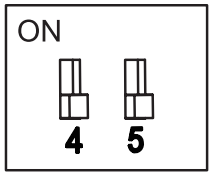

3000K

Head Office - 1850 Wilson Ave. · Toronto, ON · M9M 1A1 · **Tel:** 416.741.7336 · **Fax:** 416.741.9104
Toll Free: in Canada. 1.800.661.9610 · in USA. 1.888.762.5384 (SOCKETS4U)
www.etlin-daniels.com · For sales/service questions - sales@etlin.com