ETLIN-DANIELS

INSTALLATION MANUAL FOR SLIM PROFILE DOWNLIGHT - 5CCT DLSWRNL SERIES



SAVE THESE INSTRUCTIONS - READ ALL INSTRUCTIONS CAREFULLY

⚠ WARNING

CAN ICES-005 (B) NMB-005 (B)

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

- To prevent personal injury or product damage only licensed electricians/personnel should install fixture.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the National Electric Code (NEC)/Canadian Electrical Code (CEC) and all applicable Federal, State/Provincial and Local Electric Codes and Safety Standards.
- Disconnect fixture and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- All parts must be used as indicated in the instructions. Do not substitute any parts, leave parts out, or use any parts that are worn, damaged or broken.
- CAN ICES-005 (B) NMB-005 (B).

PACKAGE CONTENTS

1. LED DOWNLIGHT 2. JUNCTION BOX 3. HOLE TEMPLATE

RECOMMENDED DIMMER COMPATIBILITY LIST


BRAND	SERIES	MODEL	LOAD	DIMM
LUTRON	ARIADNI	AYCL-153P	150W	10%-100%
	DIVA	DV-600PR	600W	1%-100%
	DIVA	DVCL-153P	150W	10%-100%
	MAESTRO	MACL-153MH	600W	10%-100%
	MAESTRO WIRELESS	MRF2-6CL	150W	10%-100%
	ROTARY	D-600P	600W	10%-100%
	ELECTRONIC (ELV)	NTELV-300P	600W	10%-100%
	SKYLARK	S-600P	600W	10%-100%
	SKYLARK CONTOUR	CT-600P	600W	1%-100%
	SKYLARK CONTOUR	CTCL-153P	150W	10%-100%
	TOGGLER	TG-600P	600W	10%-100%
	TOGGLER	TCCL-153P	150W	10%-100%
LEVITON	SURESLIDE	6633	600W	10%-100%
	SURESLIDE DECORA	6674	600W	20%-100%
	TRIMATRON	6602	600W	20%-100%
	ILLVMATECH	IPL06	600W	1%-100%
LEGRAND	ADORNE	ADTP703TU	700W	20%-100%
	HARMONY	H703PTW	700W	10%-100%
COOPER	ASPIRE	9540	1000W	10%-100%
	DEVINE	DAL06P	300W	10%-100%

SELECTING DOWNLIGHT OR NIGHT LIGHT MODE

- To turn on the main downlight: Turn on the light switch to activate the light fixture.
- To change to night light mode with the reduced light output from the trim ring: Switch the downlight off and back on again within 3 seconds to activate night light mode.


ADJUSTING THE COLOUR TEMPERATURE

Set the Colour Temperature to your desired settings (Default Settings 3000K) by flipping 5CCT (2700K,3000K,3500K,4000K,5000K) switch on the side of the junction box (B), before inserting the junction box (B) into the ceiling.

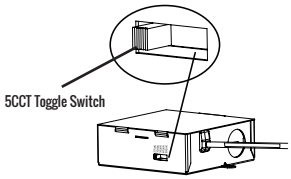


FIXTURE INSTALLATION

Fig. 1

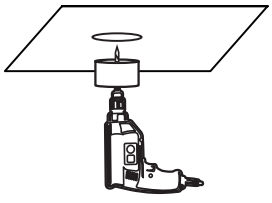


1. Place the hole template over the desired location and trace the outline. Cut out the marked opening in the ceiling with a hole saw. Note: 1/2" or 5/8" drywall recommended for easy installation

Fig. 2

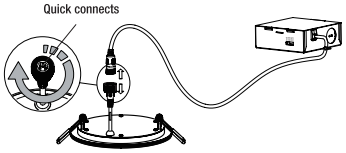


2. Loosen the quick connects in a clockwise direction and detach the fixture body from the junction box.

Fig. 3

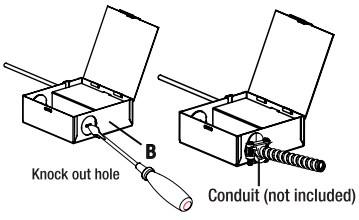

3. Remove one of the knock out holes on the side of the electrical box (B) depending on the desired installation position. Feed the conduit (not included) and all the electrical connection wires through the open knockout hole in the electrical box and tighten the conduit.

Fig. 4

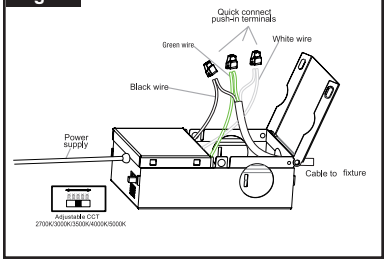

4. Feed the wires from the electrical source through the open knock out hole in the junction box (B). Insert the hot, neutral wire from the electrical source into the wire connectors of the black and white wires in the junction box (B). Then insert the ground wire and close the junction box cover.

Head Office - 1850 Wilson Ave. · Toronto, ON · M9M 1A1 · **Tel:** 416.741.7336 · **Fax:** 416.741.9104
Toll Free: in Canada. 1.800.661.9610 · in USA. 1.888.762.5384 (SOCKETS4U)
www.etlin-daniels.com · For sales/service questions - sales@etlin.com


ETLIN-DANIELS

INSTALLATION MANUAL FOR SLIM PROFILE DOWNLIGHT - 5CCT DLSWRNL SERIES




SAVE THESE INSTRUCTIONS - READ ALL INSTRUCTIONS CAREFULLY

Fig. 5

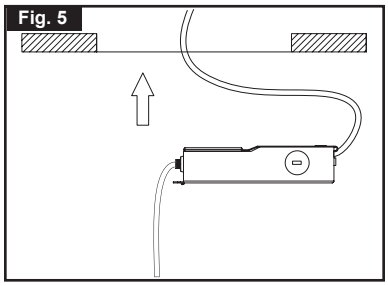


5. Place the junction box (B) through the cut-out hole in the ceiling.

Fig. 6

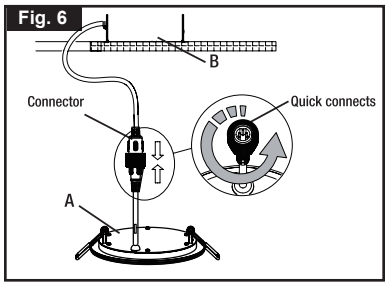


6. Align the male connector from the electrical box (B) with the female connector from the fixture (A). Lock the quick connects.

Fig. 7

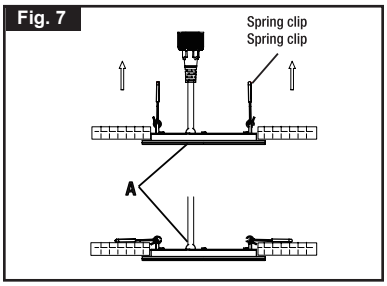

7. Insert the fixture into the ceiling cut-hole by pushing the spring clips one at a time. Gently push the fixture (A) upward until the trim is flush on the ceiling surface.

Fig. 8

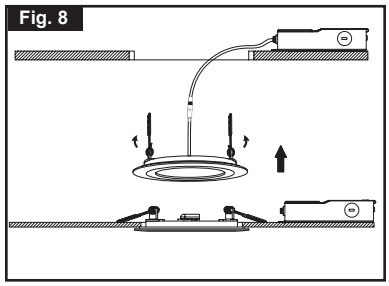

8. Restore power at the electrical panel and turn on the light switch.

Head Office - 1850 Wilson Ave. · Toronto, ON · M9M 1A1 · **Tel:** 416.741.7336 · **Fax:** 416.741.9104
Toll Free: in Canada. 1.800.661.9610 · in USA. 1.888.762.5384 (SOCKETS4U)
www.etlin-daniels.com · For sales/service questions - sales@etlin.com