
ETLIN-DANIELS

INSTALLATION FOR FLS5 AND FLL5 LOW WATTAGE FLOOD LIGHT

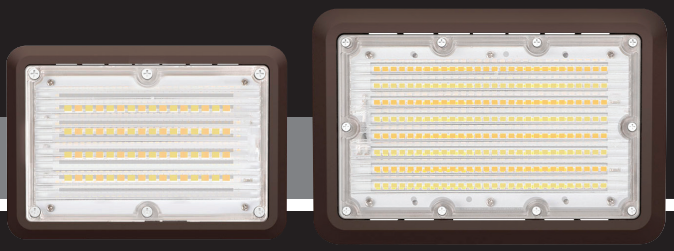

SAVE THESE INSTRUCTIONS - READ ALL INSTRUCTIONS CAREFULLY

⚠ WARNING

CAN ICES-005 (B) / NMB-005 (B)

UL CERTIFIED SAFETY US+CA SURETE US+CA E474174

PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

- To avoid risk of fire or electrical shock, this product should be installed and maintained by a qualified electrician in accordance with all national and regional electrical codes.
- Turn off power to fixture during installation and maintenance.
- Do not install fixture on rainy days.
- Any alteration or modification of this product is forbidden as it may cause personal injury,death,propertydamage and/or product malfunction.
- This luminaire is designed to operate in ambient temperatures ranging from -40°C to 45°C (-40°F to 113°F)
- MIN 75°C SUPPLY CONDUCTORS.
- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.

YOKE MOUNT

Fig. 1

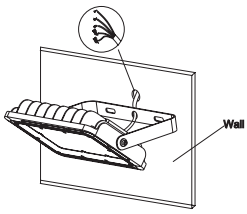


Fig. 2

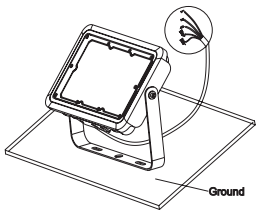


Fig. 3






Fig. 4

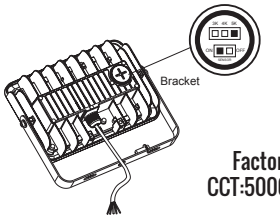

Factory Default Setting:
CCT:5000K / Photocell: ON

Fig. 5

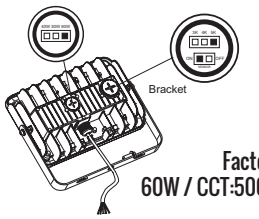

Factory Default Setting:
60W / CCT:5000K / Photocell: ON

1. Fix the fixture on the wall or ground through the holes on the bracket(Fig 1 & 2).
2. Connect the input wires per the wiring diagram below(Fig 3).
3. Loosen the screws on the two sides of the bracket to adjust the fixture to desired direction, then tighten the screws.
4. Unscrew the cap to select the desired Watt/CCT/Photocell function, 15W refer to Fig 4,60W refer to Fig 5, then screw back the cap.
5. Turn on the electricity to verify your successful installation.

KNUCKLE MOUNT

Fig. 1

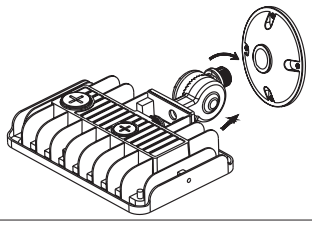


Fig. 2

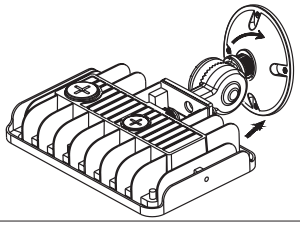


Fig. 3


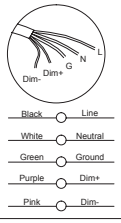


Fig. 4



Factory Default Setting:
CCT:5000K / Photocell: ON

Fig. 5

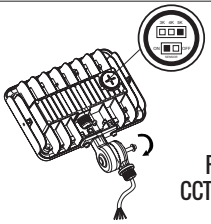


Factory Default Setting:
60W / CCT:5000K / Photocell: ON

1. Insert the knuckle into the cover plate(not provided), and adjust the fixture to desired direction.(Fig 1 & 2)
2. Connect the input wires per the wiring diagram below.(Fig 3)
3.Unscrew the cap to select the desired Watt/CCT/Photocell function, 15W refer to Fig 4, 60W refer to Fig 5, then screw back the cap.
4. Turn on the electricity to verify your successful installation.

Head Office - 1850 Wilson Ave. · Toronto, ON · M9M 1A1 · **Tel:** 416.741.7336 · **Fax:** 416.741.9104
Toll free: in Canada. 1.800.661.9610 · in USA. 1.888.762.5384 (SOCKETS4U)
www.etlin-daniels.com· For sales/service questions - sales@etlin.com

ETLIN-DANIELS

INSTALLATION FOR FLS5 AND FLL5 LOW WATTAGE FLOOD LIGHT

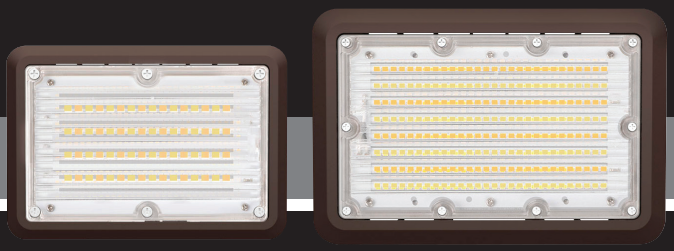

SAVE THESE INSTRUCTIONS - READ ALL INSTRUCTIONS CAREFULLY

CHANGING YOKE BRACKET TO KNUCKLE BRACKET

Fig. 1


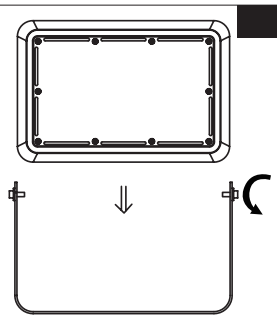


Fig. 2



Fig. 3

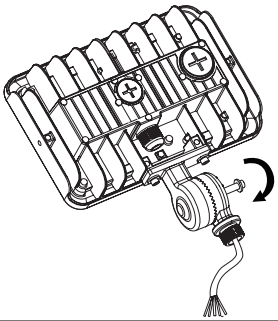

1. Loosen the 2 screws on the sides of the Yoke (Fig 1).
2. Tighten the two screws at the handle of the knuckle (Fig 2).
3. Adjusting to the correct angel, and tighten the screw of the knuckle (Fig 3).

Head Office - 1850 Wilson Ave. · Toronto, ON · M9M 1A1 · **Tel:** 416.741.7336 · **Fax:** 416.741.9104
Toll free: in Canada. 1.800.661.9610 · in USA. 1.888.762.5384 (SOCKETS4U)
www.etlin-daniels.com· For sales/service questions - sales@etlin.com